


## How To: Optimizing Logitech C920 Settings

If your photobooth came equipped with the Logitech C920 webcam, there are limited settings via the Logitech Application that can allow for better quality photos and video feeds. **Please Note: Once set, these settings will remain until the booth has been shut down - therefore you will need to perform these steps each time the booth is turned on.**


- 1) Open the Logitech Webcam Software icon located on the desktop



- 2) Click the 'Quick Capture' option

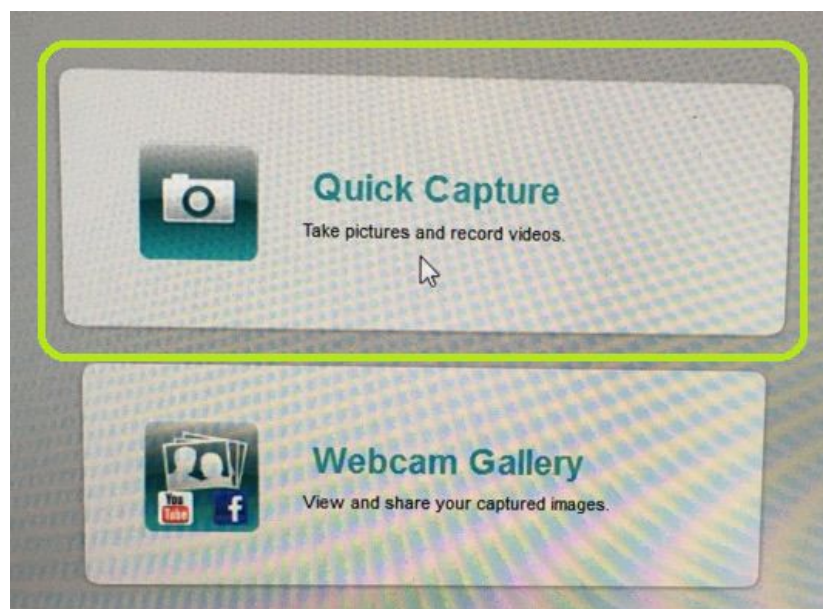

3) Click the 'Controls' button located on the bottom right

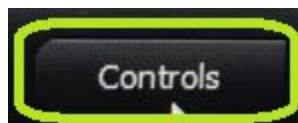

4) Set Resolution:

A. Click the 'Resolution' drop down menu and select 'Max: 15.0 MP\*'

B. Click 'Advanced Settings'



**5) Set White Balance:**

- A. In the Advanced Settings window locate the 'White Balance' slider at the bottom**
- B. Unselect 'Auto'**
- C. Slide the setting just to the right of center. Finely adjust using the live preview to the left as a reference until coloring looks natural**
- D. Click 'Save'**

